

Table of Contents

| Precautions | 2 |
|-------------------------------|----|
| Special notes on LCD monitors | 2 |
| Package contents | 3 |
| Installation instructions | 3 |
| Assembling the monitor | 3 |
| Adjusting the viewing angle | 4 |
| Connecting the devices | 6 |
| Switching the power | 7 |
| Adjusting display settings | 7 |
| External controls | 7 |
| OSD options | 8 |
| OSD menu | 8 |
| Troubleshooting | 11 |
| General specifications | 12 |



Precautions



- The monitor may be damaged if placed too near a source of heat. Be aware of the location of radiators, cookers, open fires, etc.
- Do not cover the slots and openings on the back or top of the cabinet, as the monitor requires ventilation. The monitor should be located in a well-ventilated room to prevent the possibility of overheating.
- Do not allow sharp objects such as knives, pens, or pencils near the screen. If such objects touch the screen, the LCD panel may be permanently scratched.
- When cleaning this monitor, disconnect it from the electrical socket to avoid any danger of electrocution. A soft, lint-free cloth should be used to clean the outside of the monitor. A cloth slightly moistened with a mild detergent solution will clean stubborn stains. Keep liquids away from the display screen, including sprays. Do not spray liquid directly on the monitor it is best to lightly spray on to a cloth and then gently wipe the monitor. If liquid gets inside the monitor it can cause electrical shock and/or damage to the unit.
- If you encounter a problem, please check the "Troubleshooting" section first. If this does not resolve the problem, do not attempt to repair the monitor by yourself. Opening or removing covers can lead to injury or death through electrocution or other hazards. Please contact a qualified engineer if the troubleshooting section does not solve your problem.

Recycling information

Acer cares very much about protecting the environment, and firmly believes that the environment will be healthier if appropriate measures are taken to treat and recycle industrial technology products. Such products contain hazardous, poisonous substances that can seriously harm the environment. Furthermore, industrial technology products contain materials that can be recycled and re-integrated. We strongly encourage you to recycle this IT product through the appropriate agency by reviewing the information provided below:

Worldwide: http://global.acer.com/about/sustainability.htm

United States: http://www.ciwmb.ca.gov/electronics/act2003/Recovery/Approved/

Asia: http://recycle.epa.gov.tw/public/public4_2.htm

EL-Kretsen: http://www.el-kretsen.se/
EL-retur: http://www.elretur.no/
SWICO: http://swico.one.webbuild.ch/

Special notes on LCD monitors

The following symptoms are normal for LCD monitors and do not indicate a problem with the device:

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the power switch and then turn it on again to make the flicker disappear.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less (caused by a missing pixel or a pixel that is always lit).
- When the same image is displayed for hours on end, its afterimage may remain after switching to a new image. When this happens, the screen will recover slowly by changing the image. Turning the LCD monitor off for several hours will also correct this problem.



Package contents



Power cord

User's Guide (CD)





DVI cable



CCD Monthly We discovery Common Commo

Quick Start Guide


(Optional)

Installation instructions

Assembling the monitor





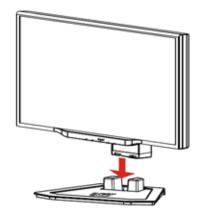

2. Connect the base into the neck of the monitor along the track.

Detaching the monitor

If you need to detach the monitor for repackaging, the monitor and base must be separated in order to fit in the carton.

To detach the monitor:

- 1. Unplug the AC power cord to make sure the power is off.
- 2. Pull the 4 hooks on the bottom side of the base and hold.
- 3. Separate the monitor and base.




Important

When separating the monitor and base, find a clean, flat surface to place the monitor on and place a clean dry cloth under the monitor to protect it further. After removing the monitor from the base, pull the monitor slightly up and away from the base and place it on the cloth.




Adjusting the viewing angle

The viewing angle of the monitor ranges from -5 - 20°.

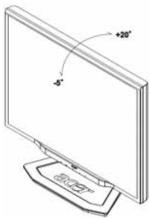


Adjusting the viewing angle (Only AL2223W h/AL2223W r)

Your monitor features a multi-adjustable stand that will enable it move 90mm up/down (height adjustment), 25 degree forward/backward (tilt adjustment), 60 degree side/side (swivel adjustment). To make an adjustment, grasp the monitor with both hands on the right and left edge of the casing and move it to the desired position.

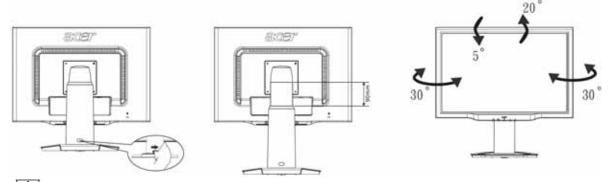

Do not perform a pulling or plugging action when the display is under slanting status to prevent the display from ejecting.

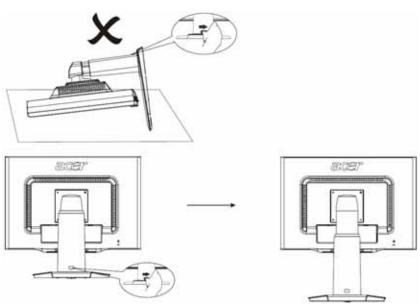


Slide the lock to right from the display support frame as per the figure and then adjust the height. Note that to slide the lock to right, erect the machine on the table to prevent the top part of the display from ejecting.



Rotate Adjustment (Only AL2223W r):

- 1. Before adjusting the height, be sure to slide the lock to right indicated in the figure. as per Fig. 1.
- 2. To rotate the screen, set the screen position to the highest height, then tilt the display forward to a proper position. as per Fig. 2.
- 3. Hold the left and right sides of screen with both hands and then turn 90 degrees in clockwise direction. as per Fig. 3.
- 4. After rotation is complete, adjust the screen height to suit your own position. as per Fig. 4.
- 5. To return to original position, turn 90 degrees in counter clockwise direction. as per Fig. 5.
- 6. After rotation is complete, adjust the screen height to suit your own position. as per Fig. 6.

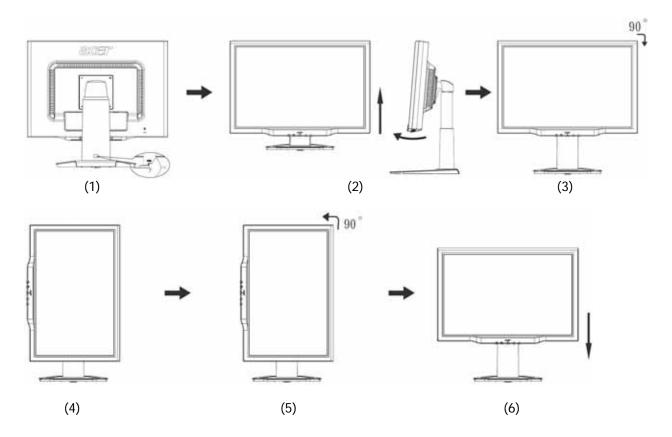

- In order to use the Pivot function, the included Pivot Software must be installed.
 - © Portrait Displays, Inc. All rights reserved.

NOTES


- Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
- Careful attention is required not to catch your fingers or hands when you change the angle.



Connecting the devices

<u>\!</u>/

Caution: Make sure that the computer and the monitor are both disconnected from the power supply.

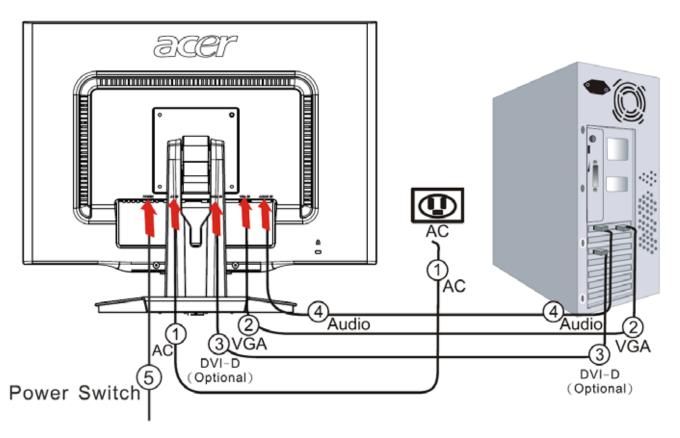


| 1 | Power cord | Attach the monitor to the power cord, and then insert the power cord into a properly grounded electrical socket. |
|---|---------------------------|---|
| 2 | VGA cable | Connect the signal cable to the VGA input socket of the monitor, and connect the signal cable to the VGA output socket of the graphics card on the computer. Then tighten the thumbscrews on the connector. |
| 3 | DVI-D cable (Optional) | Connect the signal cable to the DVI-D input socket of the monitor, and connect the signal cable to the DVI-D output socket of the graphics card on the computer. Then tighten the thumbscrews on the connector. |
| 4 | Audio cable | Connect the audio input socket (AUDIO IN) of the LCD monitor and the computer by means of the audio cable. |
| 5 | Power switch | On / off |

$\overline{\ \ }$

WARNING!

Check the VGA card of your computer. Make sure the shape of the plug matches the shape of the socket it is inserted into. Also check that none of the pins are bent or otherwise damaged.








Switching the power

First, switch on the hard-switch on the backside of monitor, then turn on PC and power button on monitor's control panel. When you see the LED on the power button go green, this indicates the computer is ready for use. Allow about 10 seconds for the video signal to appear. If you do not see the green light on the power button or a video signal, check the connections.

Adjusting display settings

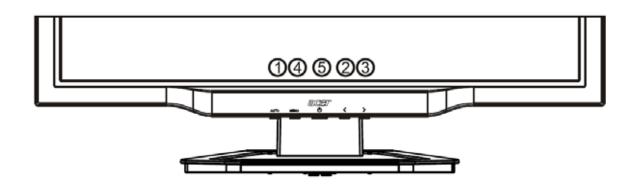

External controls

| LXIC | External controls | | | | |
|------|-------------------|------------------|---|--|--|
| 1 | AUTO | Auto | If the OSD is active, press Auto to exit a selection in the OSD. If the OSD is inactive, press Auto and the monitor will automatically optimize the position, focus, and clock of your display. | | |
| 2/3 | | Minus / Plus | If the OSD is active, press Minus or Plus to toggle between the OSD options. If OSD is inactive, press Minus or Plus to adjust the volume. | | |
| 4 | MENU | OSD functions | Press to view the OSD. Press again to enter a selection in the OSD. | | |
| 5 | ሳ | Power | Power on/off Green: power on Orange: in sleep mode | | |



OSD options

Please refer to "External controls" on Page 7.

To adjust the OSD settings:

- 1. Press the **Menu** button to open the OSD menu.
- 2. Use **Plus/Minus** buttons to toggle between the 10 OSD functions (and also to adjust the controls to desired levels once a function has been selected).
- 3. Press Menu again to select one of the 10 OSD functions.
- 4. When you have finished adjusting the OSD settings, press the **Auto** button to exit the OSD.

OSD menu





Contrast:

This adjusts dark and light shades of color relative to each other.

Brightness:

This adjusts the brightness of the picture on the screen.





Focus:

This removes any horizontal distortion and makes the picture clear and sharp.

Clock:

If there are any vertical stripes seen on the background of the screen, this renders them less noticeable by minimizing their size. It also changes the size of the horizontal screen.





H-Position:

This adjusts the horizontal.

V-Position:

This adjusts the vertical.







Color adjustment:

There are three ways to adjust color:

Warm (reddish white)

Cool (bluish white)

User (you can adjust the colors red, green and blue to the intensity you desire)





Language for Asia:

Select the OSD menu language. Select from English, German, Spanish, Simplified Chinese, Traditional Chinese, French, Italian, and Japanese.





Language for EMEA:

Select the OSD menu language. Select from English, German, Spanish, Russia, Nederlands, French, Italian, and Finnish.






OSD Settings:

This changes the position of the OSD window on the screen and the staying time.



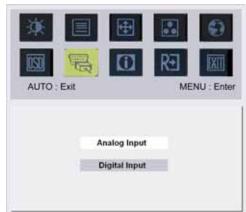



Auto Config:

System runs auto-configuration.



Input signal:


Select either **Analog Input** or **Digital Input** video.





Information

This shows information about the screen.

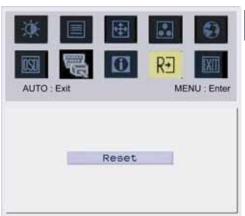



Reset:

Resets all settings to default levels.





Exit:

Exit from OSD.



Troubleshooting

| Problem | Possible Solutions |
|---|---|
| Power LED is not ON | Check to see if the power switch is in the ON position. |
| | Ensure that the Power Cord is connected. |
| No picture | Check to see if the power switch is in the ON position. |
| | Ensure that the power cord is connected. |
| | Ensure the video cable is securely connected to the back of the monitor and the computer. |
| | Move the mouse or press any key on the keyboard to bring the monitor out of "active off" mode. |
| Picture shows inappropriate colors | See color adjustment (p. 8) to adjust RGB color. |
| Picture bounces or a | Move or switch off electrical devices that may be causing interference. |
| wave pattern is present in the picture | Inspect the monitor's video cable and ensure that none of the pins are bent. |
| Image is not sized or centered properly | Press select/auto key and the monitor will automatically optimize the position of your display. |
| | See horizontal and vertical position adjustment (p. 7). |



Caution: Do not attempt to service or open the monitor or computer yourself. Please refer all servicing to qualified service personnel if the "Troubleshooting" section cannot solve your problems.



General specifications

| Item | Specification |
|---------------------------------|--|
| LCD panel | |
| Display | 22-inch flat panel active-matrix TFT LCD |
| Max resolution | WXGA+ 1680×1050 pixels |
| Pixel pitch | 0.282 mm |
| Color | 16.7 M |
| Brightness | 300 cd/m² (Typical) |
| Contrast ratio | 800:1 (Typical) |
| Response time | 5 ms (Typical) |
| View angle of horizontal | 160° |
| View angle of vertical | 160° |
| External controls | |
| Power Button | ON/OFF |
| Control Buttons | Auto, menu, minus, plus |
| OSD Function | |
| Contrast/Brightness | Contrast/Brightness |
| Focus/Clock | Focus/Clock |
| Position | Position |
| Color | Color |
| Language | Language |
| OSD setting | OSD Setting |
| Auto config / Input signal | Auto config / Input signal |
| Information | Information |
| Reset | Reset |
| Exit | Exit |
| Video Interface | 4 |
| Video | Analog 0.7 V / Digital HDCP TMDS (Optional) |
| Sync | TTL (+ / -) |
| Audio | 1.5 W x 2 |
| Plug & Play | DDC2B |
| Power | A O 400M - 240M - FO / (0 H- |
| Power source | AC 100V~240V 、 50 / 60 Hz |
| Power consumption [Energy Star] | 21.00\ |
| On. | 31.00W |
| Stand by OFF | 0.80W |
| | 0.70W |
| Power consumption Max. | 44.00W |
| Stand by | 0.80W |
| OFF | 0.70W |
| Dimension and weight | 0.7000 |
| Dimensions (W×H×D) | 513.8x417.7x203.8mm (with stand) |
| Weight (Net/Gross) | 5.2kg / 7.4 kg |
| Dimensions (W×H×D) | 513.8x390.6x258.4 mm (with stand) (Only AL2223W h/AL2223W r) |
| Weight (Net/Gross) | 7.0 kg / 9.3 kg (Only AL2223W h/AL2223W r) |
| Weight (Wei/Gloss) | 1.0 kg / 1.3 kg (Offig ALZZZZZZ HIMLZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZ |

Lamp disposal

Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org.

